

LUMUX INC.

INSTALLATION OPERATION INSTRUCTIONS

PREPARING THE LUMINAIRE

SAVE THIS INSTRUCTIONS

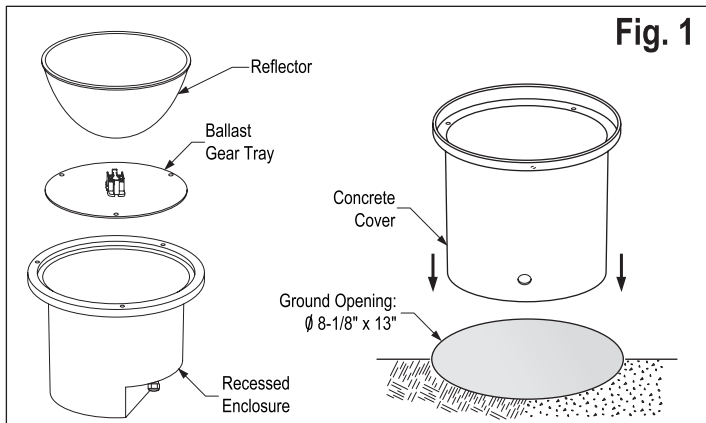


Fig. 1.- Install Luminaire Concrete Cover:

- Make a hole on desired location for lamp enclosure concrete cover (8-1/8" Dia. x 13" depth) and insert into cavity.
- Remove Ballast Gear Tray and Reflector from Enclosure.


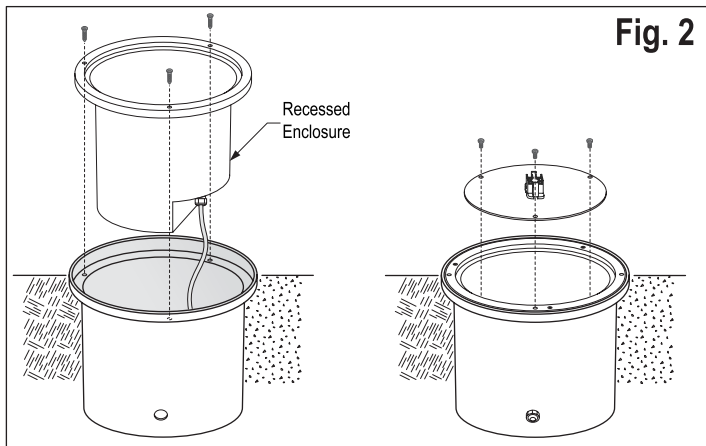


Fig. 2.- Install Luminaire Enclosure:

- Run electrical supply through the cover access holes and install the enclosures by using the machine screws provided.
- Place Ballast Tray and make electrical connections see Wire Diagram. Then, Install Ballast Tray into the Enclosure.

Wire Diagram

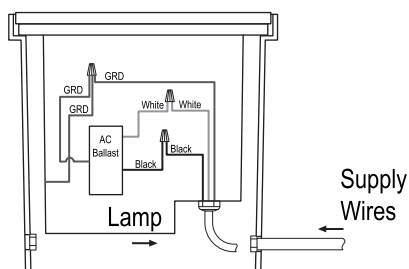

READ & UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. IF YOU ARE NOT FAMILIAR WITH THE NATIONAL ELECTRICAL CODE (NEC), CONTACT A QUALIFIED ELECTRICIAN TO INSTALL THIS LUMINAIRE FOR YOU.

WARNING.- Before installing this luminaire or doing any maintenance, turn off the power supply at the circuit breaker or fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.

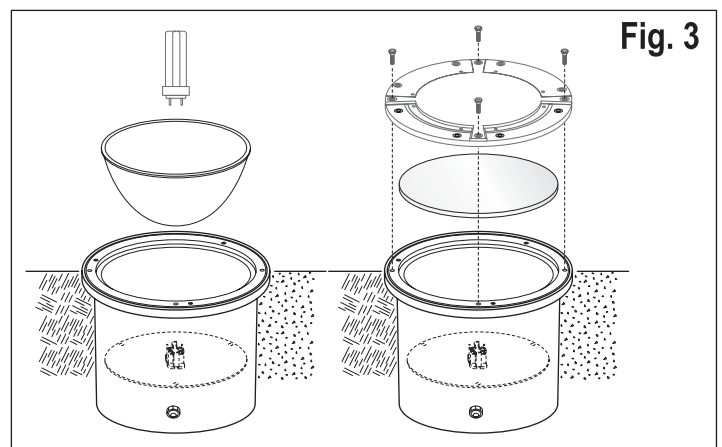


Fig. 3.- Install Lamp & Face Plates:

- Place Reflector and install proper lamp type, **DO NOT EXCEED RECOMMENDED WATTAGE** (see lamp label).
- Place lens and install face plate using the socket head screws (provided). Face plate has four removable sides (windows) for light output, remove one or all as needed.

Final Installation

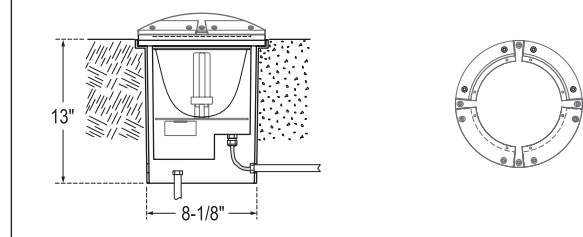


Fig. 4.- Install Proper Electrical Fittings:

Install proper fittings and electrical pipes.

NOTE:

- All electrical fittings and supplies must be water proof for proper installation.

RECESSED GROUND LUMINAIRE - PATH LIGHT - PL200

LUMUX - ARCHITECTURAL LIGHTING COMPANY- Toll Free 877- 895-5552 www.Lumux.net