


PREPARING THE LUMINAIRE


RECESSED WALL MOUNT LUMINAIRE: SL2000R

"LED"


SAVE THIS INSTRUCTIONS

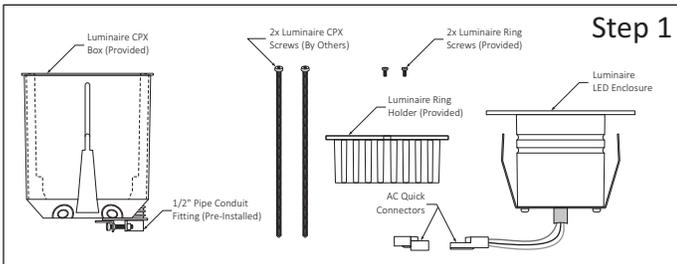

Step 1 - Disassemble Luminaire Parts for easy Installation:
 a.- Remove Luminaire Holder Ring from CPX Box.

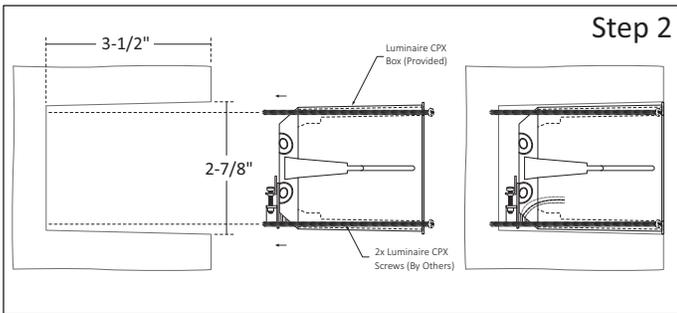

Step 2 - Install Luminaire CPX Box:
 a.- Arrange CPX Wall Cavity and Insert Electrical Conduit to the Fitting.
 b.- Install the CPX Box and fasten using screws by others.

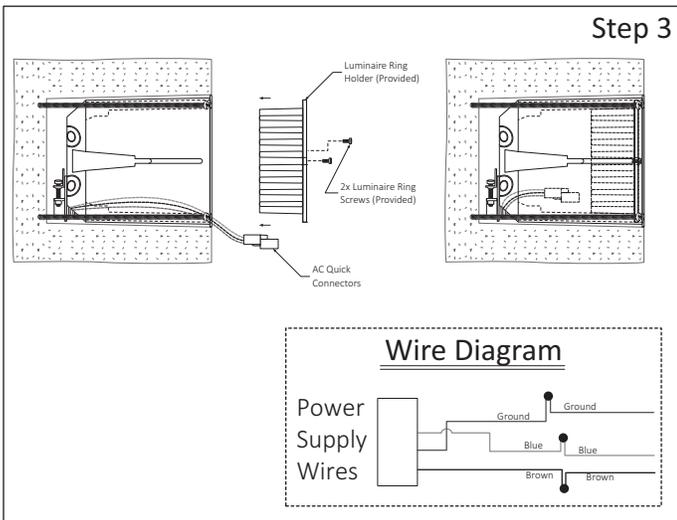


Step 3 - Make Wiring Connections / Install Holder Ring:
 a.- Pull AC Wires and connect to Quick Connector (provided), see Wire Diagram.
 b.- Install the Luminaire Ring Holder using the 2 Screws (Provided).

READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. IF YOU ARE NOT FAMILIAR WITH THE NATIONAL ELECTRICAL CODE (NEC), CONTACT A QUALIFIED ELECTRICIAN TO INSTALL THIS LUMINAIRE.

WARNING.- Before installing this luminaire or doing any maintenance, turn off the power supply at the circuit breaker or fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.

NOTE:

To re-lamp, replacement parts or additional information, contact or visit manufacturer at www.lumux.net

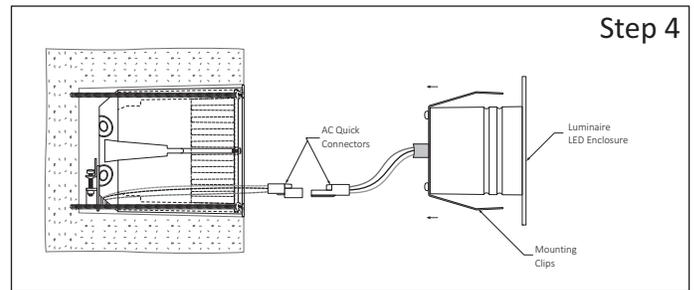

Step 4 - Install Luminaire LED Enclosure:
 a.- Place Luminaire LED Enclosure close to the CPX Box and Insert the Quick Connectors.
 b.- Insert the LED Enclosure, align the Mounting Clips into the Grooves of the Ring Holder and Push until hold it tight and Flange is flushed with Wall Surface.
 c.- Apply Silicone around Flange and Wall Surface to seal the Luminaire for water tight.

