
LUMUX INC.

PREPARING THE LUMINAIRE

SURFACE MOUNT LUMINAIRE WW300


Drill Hole for Silicone Grommet 1/4" or 3" Type 0 1-Box (by Others) Power Cord (Provided) 1-Box (Provided) Silicone Grommet Silicone Grommet Lamp Enclosure Dimension Spacs A 14" 17" 10 Max Inside Dia. B 36" 00 Minimum Blange Dia. C 174" Max Overall Height Directors E 71" Type 0 J-Box Cover (by Others) Mounting Screws (by Others)

Step 1 - Get Luminaire and proper Parts for Installation: a.- Prepare all parts as needed for water-tight Installation.

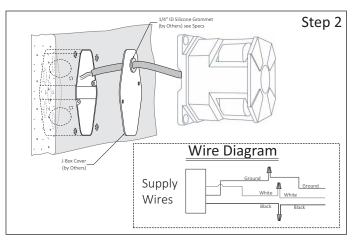

Step 2 - Install Silicone Grommet on J-Box Cover:

- a.- Make hole on corner of J-Box Cover, see Specifications of Grommet. Insert Grommet (by others) into the J-Box hole, make sure it's tight.
- b.- Place Fixture on center of J-Box and mark the four holes on the surface and drill hole to insert Screw Anchors (by others).
- c.- Run Fixture Power Cord through the Grommet and make electrical connection, see Wire Diagram.

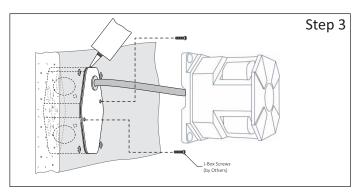

Step 3 - Install Junction Box Cover:

- a.- Place Weatherproof Cover (by Others) onto the Junction Box and fasten using the Screws (provided) J-Box Manufacturer.
- b.- If not used a Weatherproof Cover, installer must seal the Cover all around the J-Box.


SAVE THIS INSTRUCTIONS

READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION. IF YOU ARE NOT FAMILIAR WITH THE NATIONAL ELECTRICAL CODE (NEC), CONTACT A QUALIFIED ELECTRICIAN TO INSTALL THIS LUMINAIRE.

WARNING. Before installing this luminaire or doing any maintenance, turn off the power supply at the circuit breaker or fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.


NOTE:

To re-lamp, replacement parts or additional information, contact or visit manufacturer at www.lumux.net

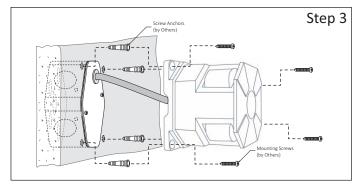

Step 3 - Install Fixture:

- a.- Insert Screw Anchors (by Others) into the mounting surface.
- b.- Push the Cord into the J-Box allowing the base to touch the surface.
- c.- Align the Fixture holes with Anchors and fasten using the mounting screws (by others).

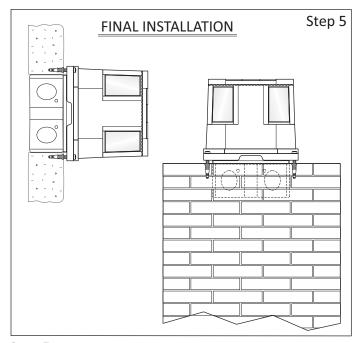

Step 5 - Final Installation:

a.- It is Recommended to Install this Luminaire where water does NOT accumulate.