LUMUX INC.

PREPARING THE LUMINAIRE

### SURFACE MOUNT LUMINAIRE SLS1000 / 1400 / 1500   SAVE THIS INSTRUCTIONS

Step 1

Silicone Grommet

Dimension		Specs
A	1/4" ID	Max Inside Dia.
B	5/8" OD	Minimum Flange Dia.
C	1/4" H	Max Overall Height
D	1/16"	Material Thickness
E	7/16"	Minimum Hole Dia.
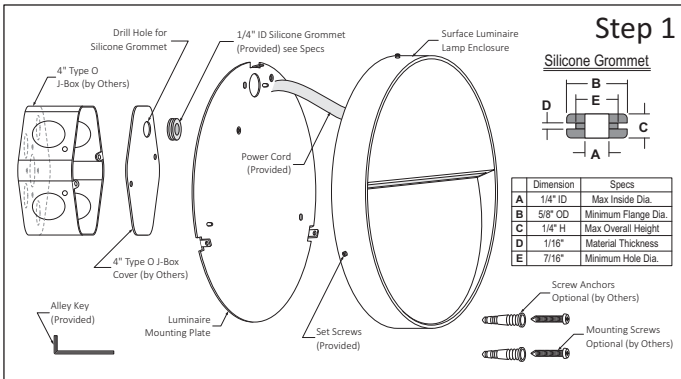
Step 1 - Get Luminaire and proper Parts for Installation:
a.- Remove Mounting Plate and prepare all parts as needed for
water-tight Installation.
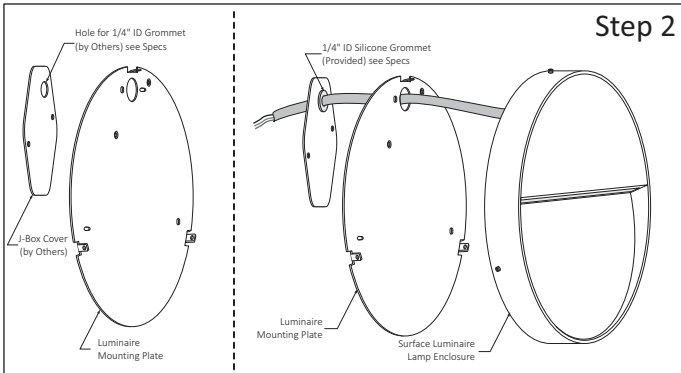
Step 2

Step 2 - Drill a Hole for Silicone Grommet on J-Box Cover:
a.- Align J-Box Cover mounting holes with Luminaire Plate holes and
trace the hole location on J-Box Cover (by others) and drill a hole,
see Specifications of Grommet.
b.- Insert Grommet (provided) into the J-Box hole, make sure it's tight.
c.- Run Fixture Power Cord through Luminaire Plate and the Grommet.

Step 3

Wire Diagram

Supply Wires

Ground
Ground
White
White
Black
Black
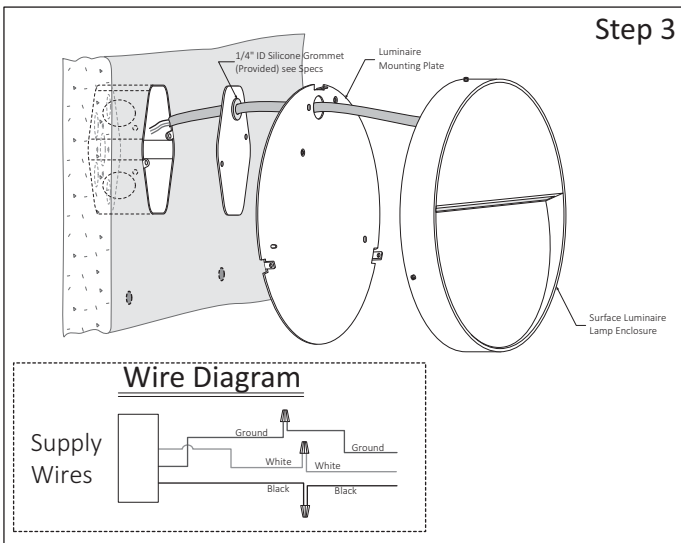
Step 3 - Make Wiring Connections:
a.- Place Luminaire close to Mounting surface and make electrical
connection, see Wire Diagram.

READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE
INSTALLATION. IF YOU ARE NOT FAMILIAR WITH THE
NATIONAL ELECTRICAL CODE (NEC), CONTACT A
QUALIFIED ELECTRICIAN TO INSTALL THIS LUMINAIRE.

WARNING.- Before installing this luminaire or doing any
maintenance, turn off the power supply at the circuit breaker or
fuse box. Turning the power off using the light switch is not
sufficient to prevent electrical shock.

NOTE:
**To re-lamp, replacement parts or additional information,
contact or visit manufacturer at www.lumux.net**
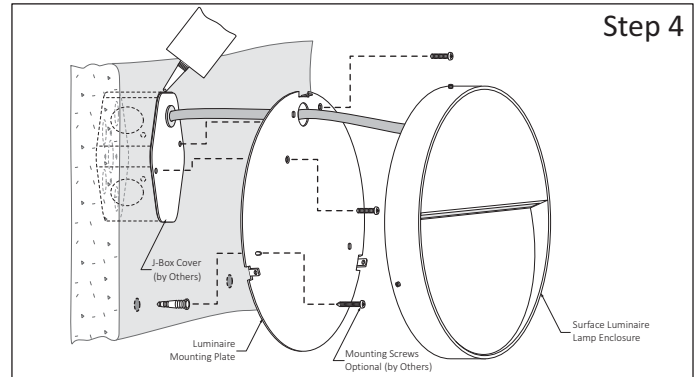
Step 4

Step 4 - Install Junction Box Cover:
a.- Place Weatherproof Cover (by Others) onto the Junction Box.
If not used a Weatherproof Cover, installer must seal the Cover
all around the J-Box.
b.- Place Mounting Plate and align holes to J-Box Cover and fasten
using the Screws (provided) J-Box Manufacturer.
Installer may use additional mounting screws and anchors (by others).
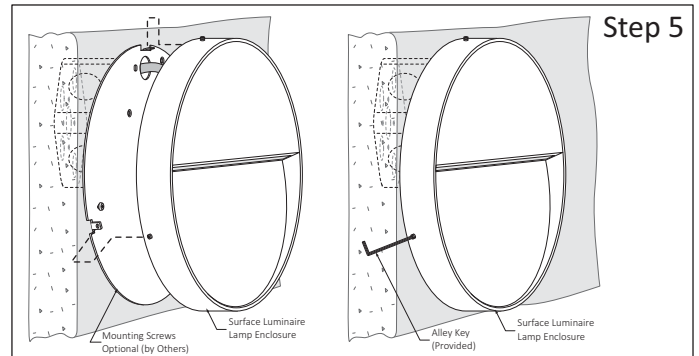
Step 5

Step 5 - Install Surface Mount Luminaire:
a.- Push the Power Cord into the J-Box and align Mounting Plate Taps to
Luminaire grooves "set Screws" and fasten the Set Screws using the
Alley Key (provided).

FINAL INSTALLATION   Step 6

SLS1500   SLS1000

SLS1400